


Installation Guide

Date | 1.01.2019
Release No. | 1


Equipment required

- Mechanical fixings - countersunk self-tapping screws 6g x 1" (6g x 25mm)
Note: Screws must be countersunk so the Tredsafe insert will adhere over the top once installed.
- Battery operated cordless drill with hammer function (or electric drill if preferred)
- Squaredrive screwdriver bits
- Hammer
- Wipes or cloth rags
- Denatured or Isopropyl alcohol

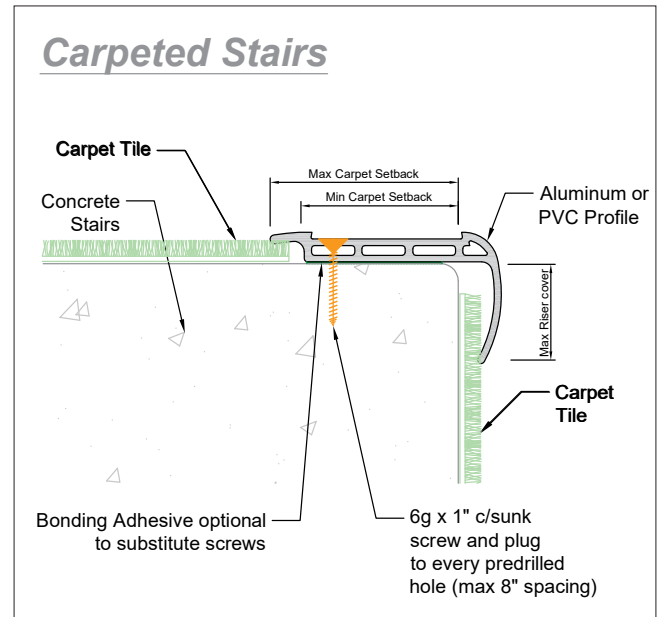


Profile Installation

Step 1 Cut Measure and cut the profile to the required length. Lengths shorter than two pre-drilled screw holes require a hole to be manually drilled and countersunk onsite. Maximum spacing of screw fixings is every 8 inches.

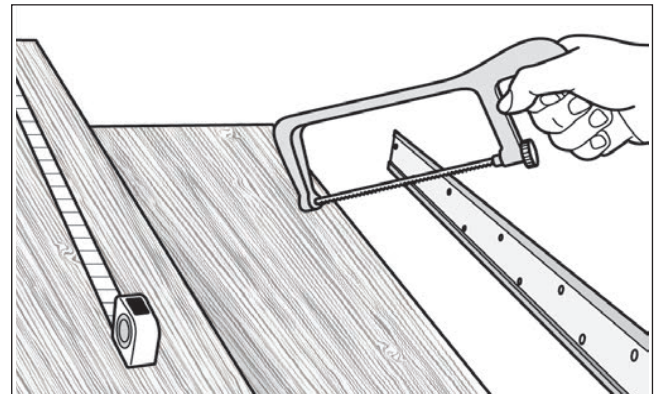


Step 2 Use a sample profile to measure the distance between stair edge and carpet.

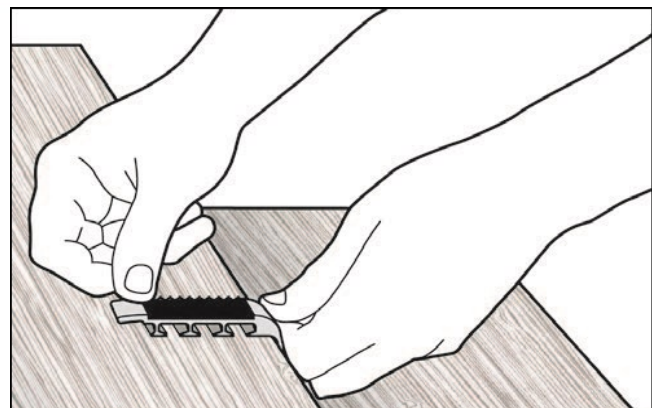


Step 3

Mark where the carpet should be cut back to.

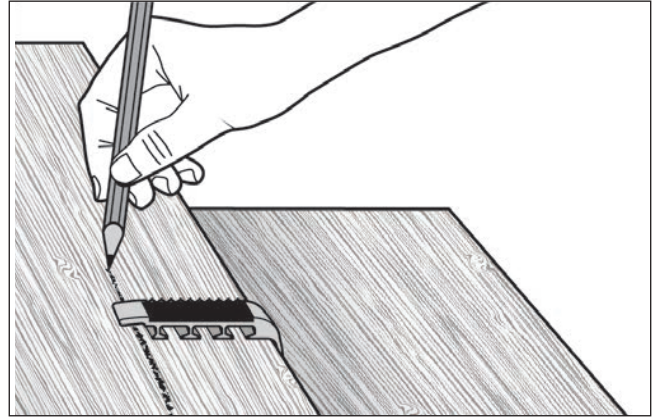


Step 4

Once carpet is installed, check the distance is correct using sample profile.

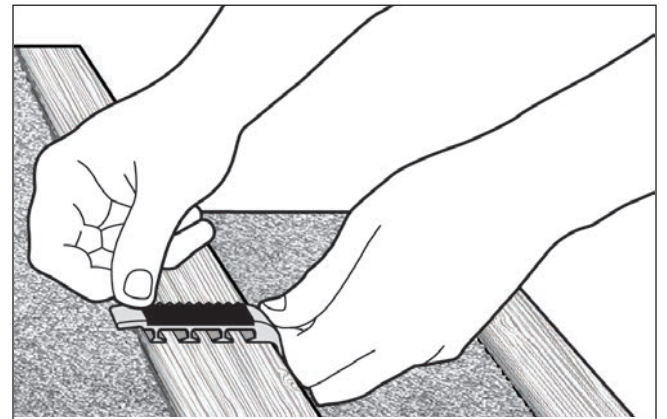

Step 5

If installing on a concrete substrate, lay cut profile on the stair edge in place then mark the c/sunk holes with a marker then remove profile. Using a 1/4 inch (5.5mm) masonry drill bit on a drill with hammer function, gently drill the holes on the marks to a depth of 1' 3/8" (35mm) max. Once complete clean holes from concrete dust and tap the nylon plugs into holes ensuring they are recessed slightly. Reposition the profile and screw the profile down fastening it tightly.

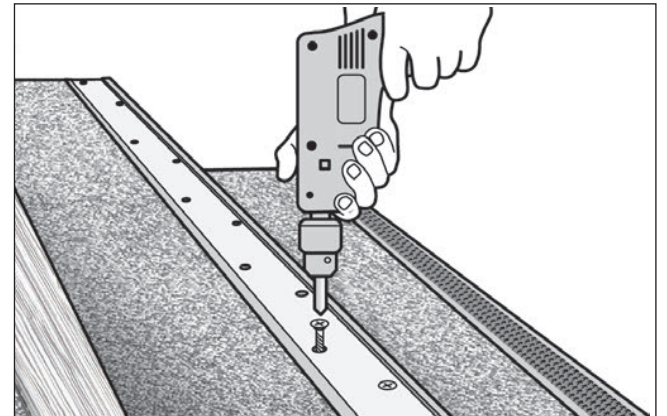


Once all screws are fastened, the profile installation is complete and the insert can be installed.

Installation of Adhesive Insert


Step 1

- Ensure the aluminium channel is clean from dust, residues and debris. Wipe down with a cleaning solvent (Isopropyl Alcohol or similar).

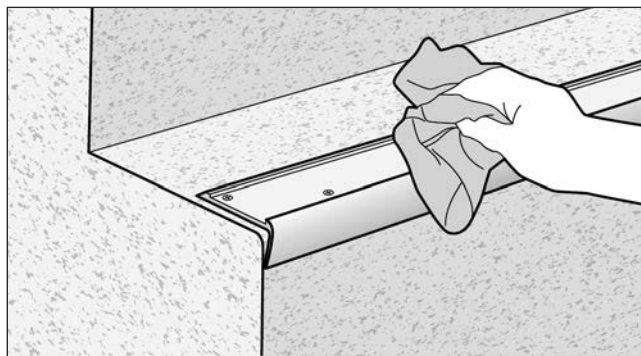


Step 2

- Precut the Insert to your required length.

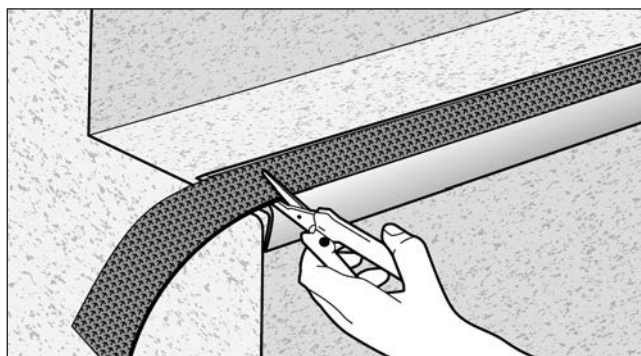


Step 3

- Remove the adhesive backing liner from the Tredsafe Insert.

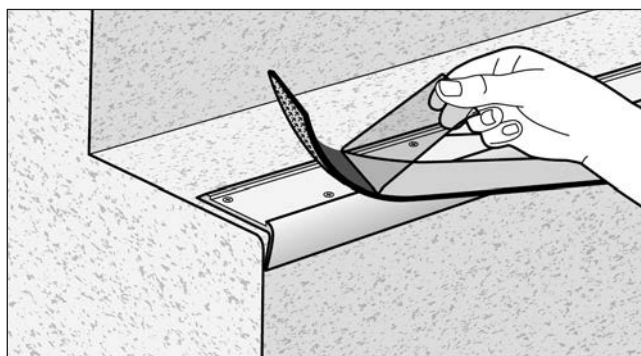


Step 4

- Install by placing the Insert into the nosing and pressing into place without undue stretching.

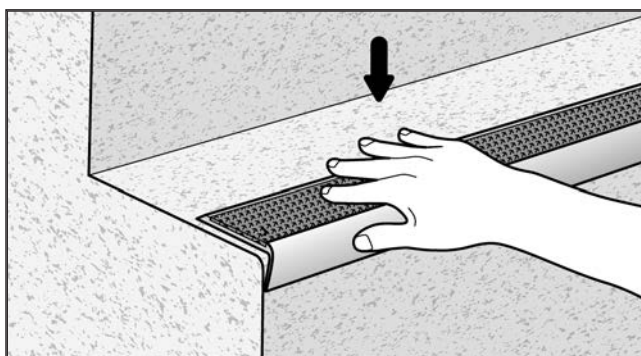

Step 5

- Once in place, roll over the Insert to ensure consistent adhesion and a secure bond.
- Please take care not to stretch the Insert when rolling.

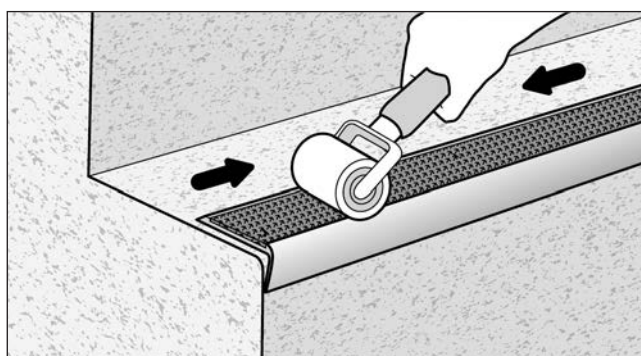

Installation is now complete.